



# ChefTab® Bump Bar Guide

Key definitions and usage for ChefTab® Pro and ChefTab® X bump bars

There are two types of ChefTab® bump bar key layouts. The original ChefTab® Pro Bump Bar and the newer ChefTab® X Bump Bar. The ChefTab® X Bump Bar is now the official bump bar shipped with all ChefTab® products.

Functionally, both bump bars will perform the same tasks and the new ChefTab® X bump bar is 100% backward compatible with the original bump bar.

Original ChefTab® Pro bump bar (from 2015-2021)



New ChefTab® X bump bar (as of 2022)

ITEM BUMP	MGR MENU	HOME	TRASH	UNDO	SUM				BUMP
.	HELP	ESC	DEL	BKSP	END	NEXT			OK
0	1	2	3	4	5	6	7	8	9

Visit [www.selectelectronics.com](http://www.selectelectronics.com) for additional tutorials.

## Now, let's get into the functionality of each key.....

<b>Numeric keys 0-9</b>	Bump tickets by number as well as all other numeric entries
<b>Arrow keys</b> (Up,Down,Left,Right)	Used to navigate lists and tickets
<b>.</b> (decimal point)	Generally used for entering IP addresses
<b>Home</b>	Return to Active Ticket screen, first ticket
<b>Trash</b>	Enter Trash Bin to see previously bumped tickets
<b>Undo</b>	Un-Bump recently bumped tickets in sequence
<b>Sum</b>	Show summary of items from ALL tickets
<b>Help</b>	Open Help Menu to access additional User functions
<b>Mgr Menu (Menu)</b>	Open Menu of Mgr Only functions (requires passcode)
<b>OK</b>	Used to exit pop-ups OR as an ENTER key
<b>Bump</b>	Bump currently selected / highlighted ticket
<b>Item Bump</b>	Open selected ticket to bump or un-bump individual items
<b>Esc</b>	Used to exit menu's or screens
<b>Bksp, End, Del</b>	Used to navigate within a Text entry field
	Show ChefTab Information (same as Help / About)
<b>Next</b>	Move to next field