



ChefTab® Bump Bar Guide

Key definitions and usage for ChefTab® Pro and ChefTab® X bump bars

There are two types of ChefTab® bump bar key layouts. The original ChefTab® Pro Bump Bar and the newer ChefTab® X Bump Bar. The ChefTab® X Bump Bar is now the official bump bar shipped with all ChefTab® products.

Functionally, both bump bars will perform the same tasks and the new ChefTab® X bump bar is 100% backward compatible with the original bump bar.

Original ChefTab® Pro bump bar (from 2015-2021)



New ChefTab® X bump bar (as of 2022)

ITEM BUMP	MGR MENU	HOME	TRASH	UNDO	SUM				BUMP
.	HELP	ESC	DEL	BKSP	END	NEXT			OK
0	1	2	3	4	5	6	7	8	9

Visit www.selectelectronics.com for additional tutorials.

Now, let's get into the functionality of each key.....

Numeric keys 0-9	Bump tickets by number as well as all other numeric entries
Arrow keys (Up,Down,Left,Right)	Used to navigate lists and tickets
. (decimal point)	Generally used for entering IP addresses
Home	Return to Active Ticket screen, first ticket
Trash	Enter Trash Bin to see previously bumped tickets
Undo	Un-Bump recently bumped tickets in sequence
Sum	Show summary of items from ALL tickets
Help	Open Help Menu to access additional User functions
Mgr Menu (Menu)	Open Menu of Mgr Only functions (requires passcode)
OK	Used to exit pop-ups OR as an ENTER key
Bump	Bump currently selected / highlighted ticket
Item Bump	Open selected ticket to bump or un-bump individual items
Esc	Used to exit menu's or screens
Bksp, End, Del	Used to navigate within a Text entry field
 Next	Spy Mode - View the screen of other ChefTab stations
Next	Move to next field